


DIAMOND**GRID**™ Installation Manual

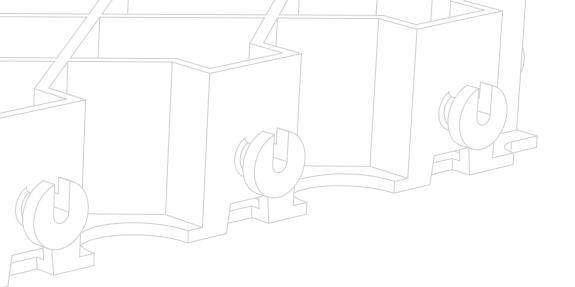





Contents

Specification Sheet	3
DiamondGrid™ Minimal Base Preparation	4
DiamondGrid™ Medium Base Preparation	7
DiamondGrid™ Excavation and Major Base Preparation	11

Specification Sheet

DIAMOND GRID TO












UV STABILIZED RELOCATABLE

DO-IT YOURSELF

INTERLOCKING SYSTEM

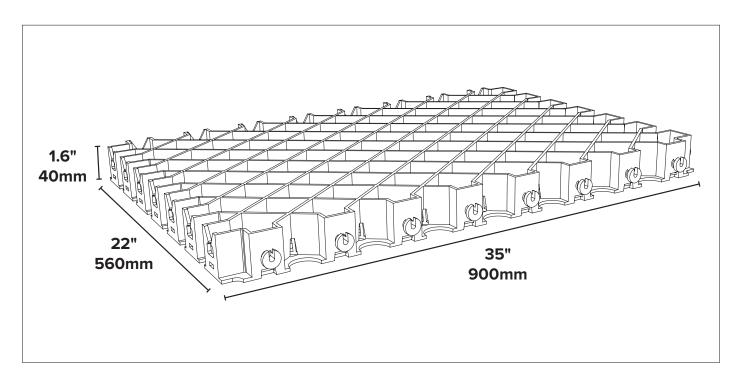

Measurements							
	M	മാ	CI	ırρ	m	Or	۱ta

35" **W** x 22" **L** x 1.6" **H** ◆ 900mm **W** x 560mm **L** x 40mm **H**

Crush resistance (filled with gravel/road base)	100+ tons/sqft filled* ◆ 1000+ tonne m ^{2*}
Crush resistance (empty grid)	30 tons/sqft empty* ◆ 300 tonne m²*
Weight per grid	7.05 lbs • 3.2kg
Fill ratio	1 cubic yard of fill per 207.9 square feet ◆ 1 cubic metre of fill per 26m²
Permeability	Up to 96%
Recommended Fill	Road base, gravel, pebbles, grass, soil, concrete, asphalt

Applications suitable for Diamond Grid include:

- Cart paths
- ◆ Access Roads
- Machinery/Storage Sheds

- Workshop floors
- Car parks
- ◆ Turf stabilization






DiamondGrid™ Minimal Base Preparation

4 diamondgrid.com

DiamondGrid™ Minimal Base Preparation




Using a grader or a Bobcat and spreader bar, level the site in readiness to lay your DiamondGrid™.

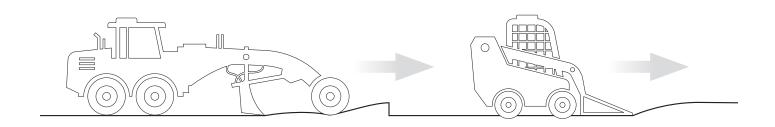

Note: If the site is still uneven, 0.4" (10mm) of crushed 0.2" (5mm) minus rock and fines can be spread as bedding.


1


Lay fabric over the levelled area.

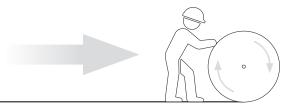



Lay the DiamondGrid™ grids starting in one corner with the male lugs facing outwards on both male sides. Depress each connection until flat and secure.

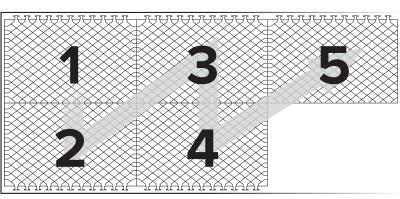


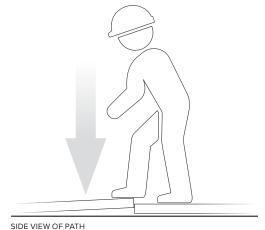

TOP VIEW OF PATH

3

Fill the DiamondGrid™ with a Bobcat and spreader bar or something similar with your choice of DiamondGrid™ recommended filler materials.

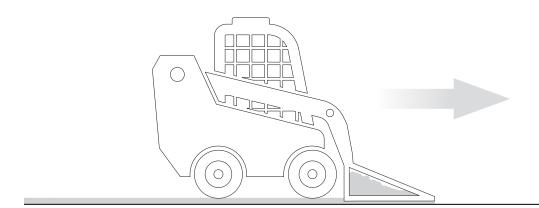






DiamondGrid[™] Medium Base Preparation

diamondgrid.com 7

DiamondGrid™ Medium Base Preparation




Lay fabric over the area where the grids are going to be laid.

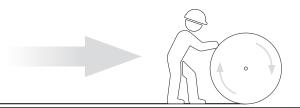


1

Cover the fabric with road base.

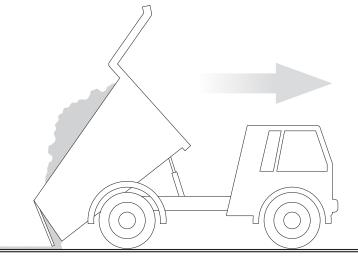




Compact road base with rollers or vibrating plate to a level 1.6" (40mm) below finish height.

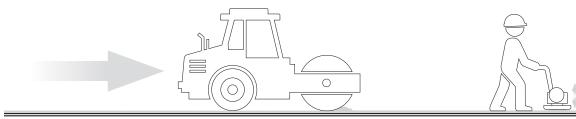

3


Use a grader or a Bobcat and spread spreader bar, level the site in readiness to lay your DiamondGrid $^{\text{\tiny{M}}}$.

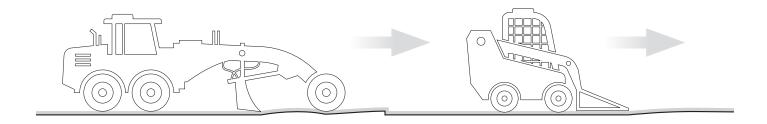

Note: If the site is still uneven, 0.4" (10mm) of crushed 0.2" (5mm) minus rock and fines can be spread as bedding.




Lay the DiamondGrid™ grids starting in one corner with the male lugs facing outwards on both male sides. Depress each connection until flat and secure.

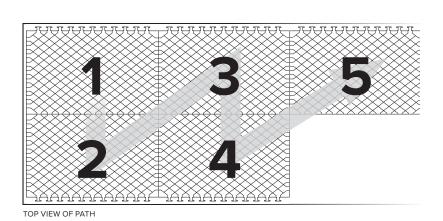



SIDE VIEW OF PATH

Fill the DiamondGrid™ with a Bobcat and spreader bar or something similar with your choice of DiamondGrid™ recommended filler materials.

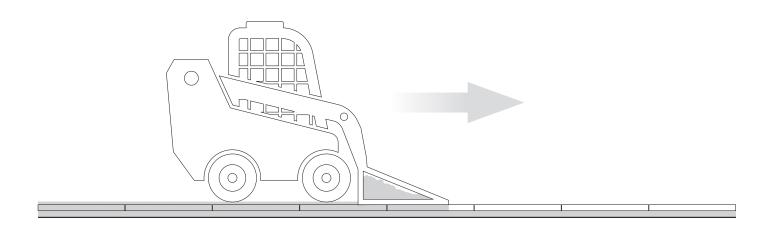






DiamondGrid[™] Excavation and Major Base Preparation

diamondgrid.com 1

DiamondGrid™ Excavation and Major Base Preparation




Excavate the site to a depth of 7.9" (200mm) to 13.8" (350mm) depending on the consistency of the sub-grade.

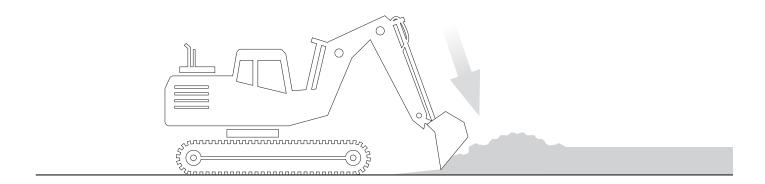


1

Lay fabric over the area where the grids are going to be laid.

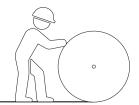




Cover the fabric with road base.

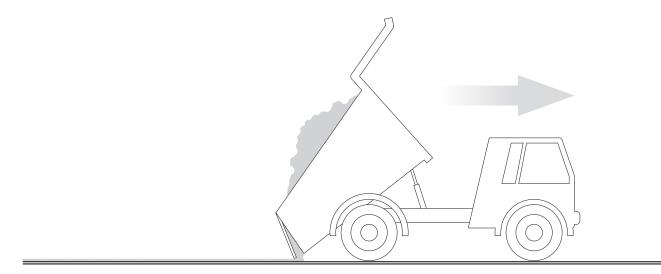


3

Compact road base with rollers or vibrating plate to a level 1.6" (40mm) below finish height.

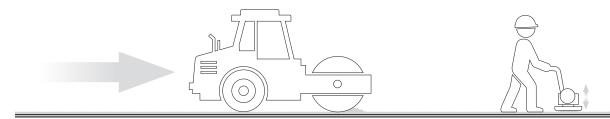




Use a grader or a Bobcat and spread spreader bar, level the site in readiness to lay your DiamondGrid™.

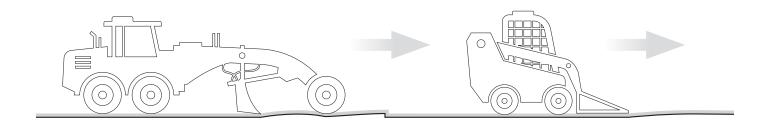

Note: If the site is still uneven, 0.4" (10mm) of crushed 0.2" (5mm) minus rock and fines can be spread as bedding.

5


Lay the DiamondGrid™ grids starting in one corner with the male lugs facing outwards on both male sides. Depress each connection until flat and secure.

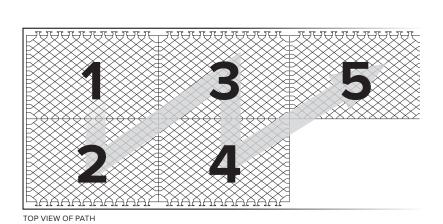





Fill the DiamondGrid™ with a Bobcat and spreader bar or something similar with your choice of DiamondGrid™ recommended filler materials.

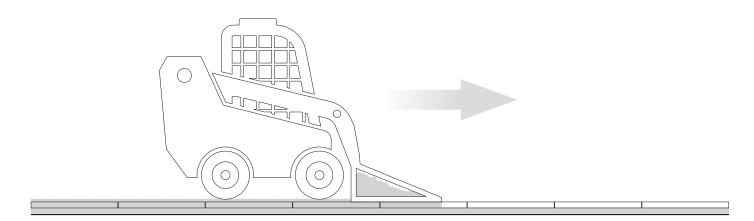



FOR A SOLID SURFACE, ANYWHERE.

DiamondGrid $^{\text{M}}$ International Pty Ltd makes no representations or warranties in respect of the suitability of the DiamondGrid $^{\text{M}}$ product to any customers' individual applications. The information in this guide is general only and customers should seek advice prior to commencing installation to ensure that the conditions of their project are catered to. DiamondGrid $^{\text{M}}$ International Pty Ltd accepts no liability where damage is caused to the DiamondGrid $^{\text{M}}$ due to a failure to seek appropriate installation advice prior to commencing the project.